


APPLICATION INSTRUCTION

UV-Protection Film semaSORB®DK400



se ma Gesellschaft für Innovationen mbH
Industriestraße 12
D-06869 Coswig / GERMANY
Phone: +49(0)34903 30464
Telefax: +49(0)34903 30465
E-Mail: info@sema-gmbh.com
www.sema-gmbh.com

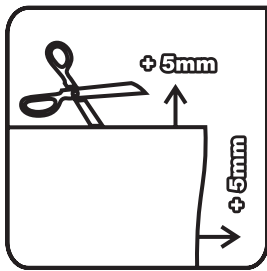


- 1.**
Cut the film.
Include a bleed of
5mm on each side.

Application equipment:

- Scissors & ruler
- Spray bottle with assembly solution
(water with several drops of assembly concentrate)
- Clean, soft cloth or kitchen roll
- Cutter
- Squeegee with felt



- 2.**
Clean and dry the
glass and the frame.
Spray with assembly
solution so that the
glass surface is wet.

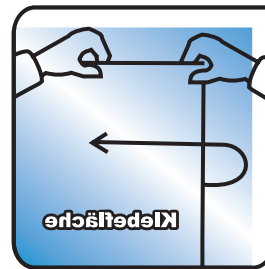

- 6.**
Turn the film over, apply it
with the adhesive side to the
upper glass edge and align it.
WARNING! The glass should
still be wet – otherwise, spray
the entire pane again.




- 3.**
Insert the fitted film so
that the protective film
points towards you.



- 7.**
Spray the entire
film.



- 4.**
Use 2 adhesive strips to
remove the protective
film from the adhesive.

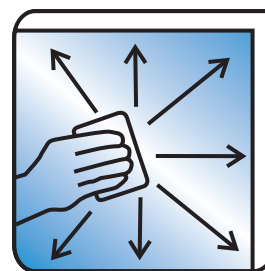

- 8.**
Use the squeegee to
completely remove
the water. Start in
the centre and move
the squeegee to the
top and bottom.



- 5.**
Spray the entire
adhesive side of the
film with plenty of
assembly solution.



- 9.**
Cut the film to fit the
frame. Always cut out
from the corner of the
frame. Dry the edge
using a squeegee.

Use a soft cloth or
kitchen roll to carefully
absorb the moisture
remaining on the frame.

WARNING! NEVER clean the film dry!