


# APPLICATION INSTRUCTION



se ma Gesellschaft für Innovationen mbH  
Industriestraße 12  
D-06869 Coswig, GERMANY  
Phone: +49(0)34903 30464  
Telefax: +49(0)34903 30465  
E-Mail: info@sema-gmbh.com  
www.sema-gmbh.com

## Vogel Bird deterrent - Film semaSORB PROBIRD DK400® - Design

semaSORB PROBIRD DK400® - Bild

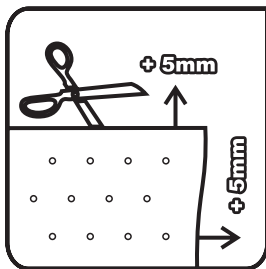


1. Cut the film. Include a bleed of 5mm on each side.

### Application equipment:

- Scissors & ruler
- Spray bottle with assembly solution (water with several drops of assembly concentrate)
- Clean, soft cloth or kitchen roll
- Cutter
- Squeegee with felt



2. Clean and dry the glass and the frame. Spray with assembly solution so that the glass surface is wet.

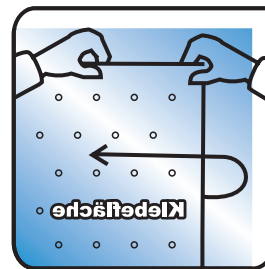

6. Turn the film over, apply it with the adhesive side to the upper glass edge and align it. **WARNING!** The glass should still be wet – otherwise, spray the entire pane again.




3. Insert the fitted film so that the protective film points towards you.



7. Spray the entire film.




4. Use 2 adhesive strips to remove the protective film from the adhesive.

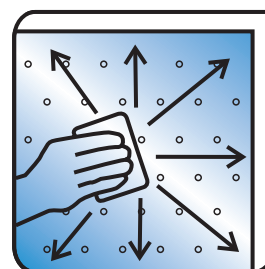

8. Use the squeegee to completely remove the water. Start in the centre and move the squeegee to the top and bottom.



5. Spray the entire adhesive side of the film with plenty of assembly solution.

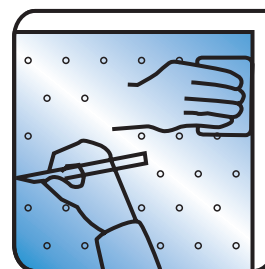

9. Cut the film to fit the frame. Always cut out from the corner of the frame. Dry the edge using a squeegee.

Use a soft cloth or kitchen roll to carefully absorb the moisture remaining on the frame.

**WARNING! NEVER** clean the film dry!