

APPLICATION INSTRUCTION




se ma Gesellschaft für Innovationen mbH
Industriestraße 12
D-06869 Coswig, GERMANY
Phone: +49(0)34903 30464
Telefax: +49(0)34903 30465
E-Mail: info@sema-gmbh.com
www.sema-gmbh.com

Vogel-A Bird deterrent - Film

semaSORB **PROBIRD** DK400® - Xtal

semaSORB **PROBIRD** DK400® - Xtal

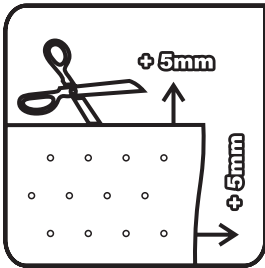


1.
Cut the film.
Include a bleed of
5mm on each side.

Application equipment:

- Scissors & ruler
- Spray bottle with assembly solution
(water with several drops of assembly concentrate)
- Clean, soft cloth or kitchen roll
- Cutter
- Squeegee with felt



2.
Clean and dry the
glass and the frame.
Spray with assembly
solution so that the
glass surface is wet.

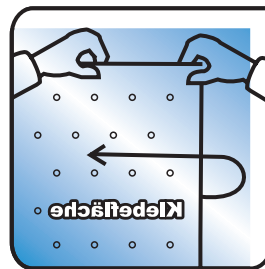

6.
Turn the film over, apply it
with the adhesive side to the
upper glass edge and align it.
WARNING! The glass should
still be wet – otherwise, spray
the entire pane again.




3.
Insert the fitted film so
that the protective film
points towards you.



7.
Spray the entire
film.



4.
Use 2 adhesive strips to
remove the protective
film from the adhesive.

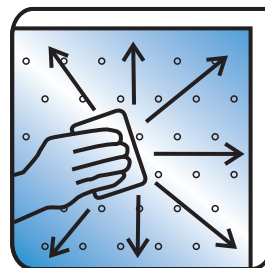

8.
Use the squeegee to
completely remove
the water. Start in
the centre and move
the squeegee to the
top and bottom.



5.
Spray the entire
adhesive side of the
film with plenty of
assembly solution.



9.
Cut the film to fit the
frame. Always cut out
from the corner of the
frame. Dry the edge
using a squeegee.

Use a soft cloth or
kitchen roll to carefully
absorb the moisture
remaining on the frame.

WARNING! NEVER clean the film dry!