


APPLICATION INSTRUCTION

Bird deterrent strips semaSORB PROBIRD DK500® - TAPE



se ma Gesellschaft für Innovationen mbH
Industriestraße 12
D-06869 Coswig / GERMANY
Phone: +49 34903 30464
Telefax: +49 34903 30465
E-Mail: info@sema-gmbh.com
www.sema-gmbh.com

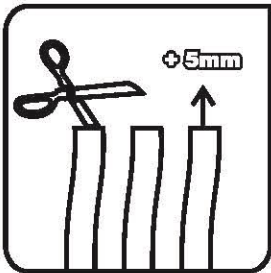


1.
Cut the strips to size.
Add a bleed of 5mm.

Application equipment:

- Scissors & ruler
- Spray bottle with assembly solution
(water with several drops of assembly concentrate)
- Clean, soft cloth or kitchen roll
- Cutter
- Squeegee with felt




2.
Clean and dry the
glass and the frame.

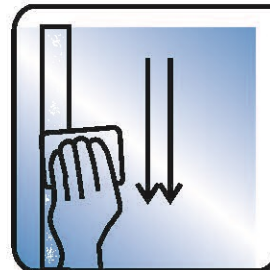

6.
Completely remove
the water moving the
squeegee vertically
down and up.



3.
Use 2 adhesive strips to
remove the protective
film from the adhesive.

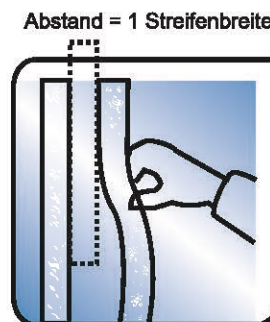

Abstand = 1 Streifenbreite


7.
Repeat steps 4+5 – spray the
entire adhesive side of the
strip with assembly solution –
Position the strips flush with the
top maintaining a distance of
one strip width to the last film
strip.



4.
Spray the entire
adhesive side of the
strip with assembly
solution.



8.
Repeat step 6 – Completely
remove the water moving the
squeegee vertically down
and up – Continue until the
glass surface to be equipped
is covered with strips.

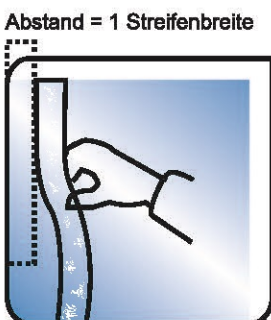

Abstand = 1 Streifenbreite

5.
Position the strip flush
with the top maintaining
a distance of one strip
width to the window
frame – you can use 1
film strip as application
aid.



9.
If necessary, cut the film
strips to fit within the frame.
Use a squeegee to dry the
edge. Use a soft cloth/
kitchen roll to carefully
absorb the residual moisture
on the frame.

WARNING! NEVER clean the films dry!