


# APPLICATION INSTRUCTION



se ma Gesellschaft für Innovationen mbH  
Industriestraße 12  
D-06869 Coswig, GERMANY  
Telefon: +49 34903 30464  
Telefax: +49 34903 30465  
E-Mail: info@sema-gmbh.com  
www.sema-gmbh.com

## Bird deterrent strips semaSORB **PROBIRD** DK400® - TAPE

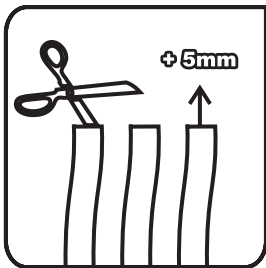


- 1.**  
Cut the strips to size.  
Add a bleed of 5 mm.

### Application equipment:

- Scissors & ruler
- Spray bottle with assembly solution  
(water with several drops of assembly concentrate)
- Clean, soft cloth or kitchen roll
- Cutter
- Squeegee with felt




- 2.**  
Clean and dry the  
glass and the frame.

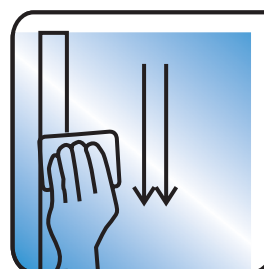

- 6.**  
Completely remove  
the water moving the  
squeegee vertically  
down and up.




- 3.**  
Use 2 adhesive strips to  
remove the protective  
film from the adhesive.

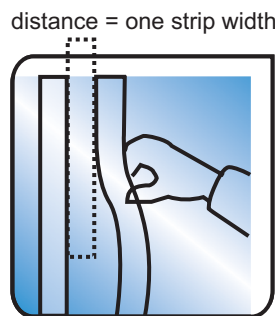


distance = one strip width

- 7.**  
Repeat steps 4+5 – spray  
the entire adhesive side  
of the strip with assembly  
solution – Position the strips  
flush with the top maintain-  
ing a distance of one strip  
width to the last film strip.

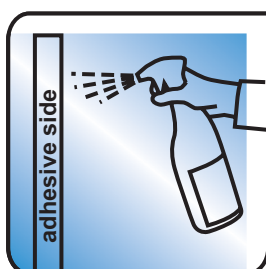


- 4.**  
Spray the entire  
adhesive side of the  
strip with assembly  
solution.

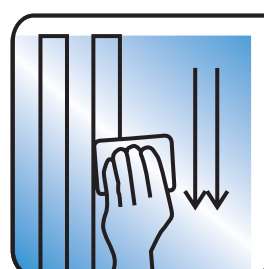

- 8.**  
Repeat step 6 – Com-  
pletely remove the water  
moving the squeegee  
vertically down and up –  
Continue until the glass  
surface to be equipped is  
covered with strips.

distance = one strip width

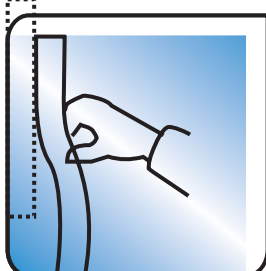

- 5.**  
Position the strip flush  
with the top maintaining  
a distance of one strip  
width to the window  
frame – you can use 1  
film strip as application  
aid.



- 9.**  
If necessary, cut the film  
strips to fit within the  
frame. Use a squeegee to  
dry the edge. Use a soft  
cloth / kitchen roll to care-  
fully absorb the residual  
moisture on the frame.

**WARNING! NEVER** clean the film dry!